


**TOWING DOESN'T HAVE TO BE A
THRILLRIDE**

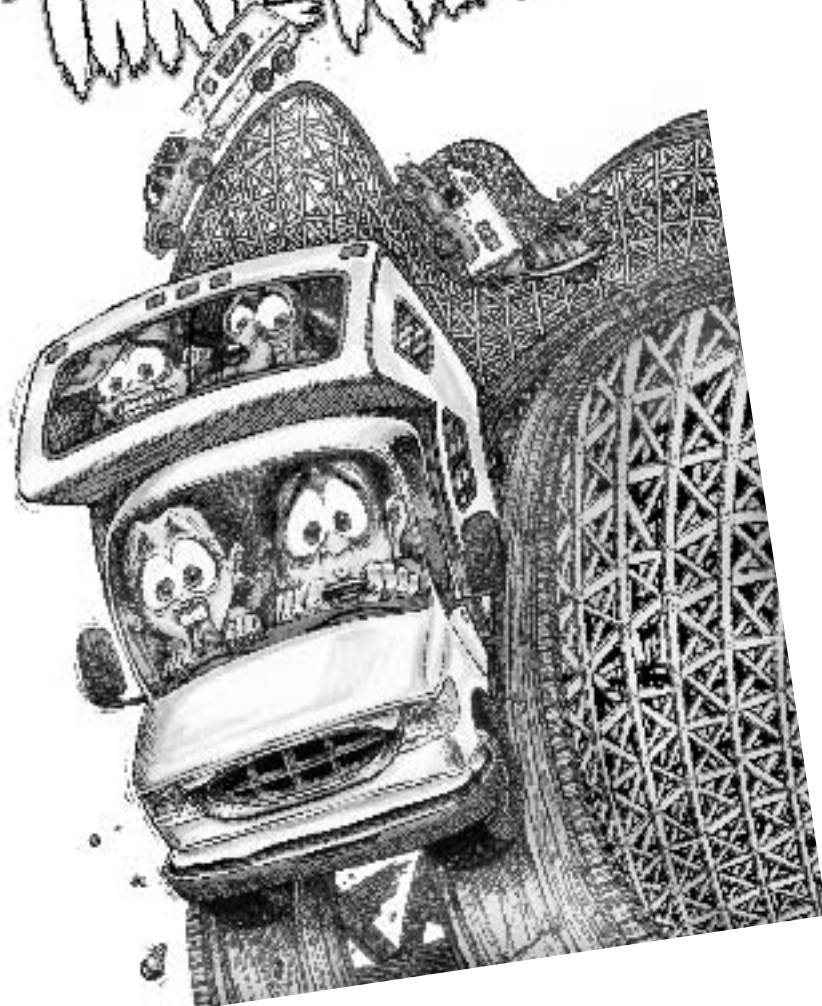

FIX IT WITH AIR!

- All new easier to use format
- #1 in no drill applications
- Best warranty in the business



RIDE COMFORT, SAFETY AND LOAD SUPPORT SINCE 1950

2005 APPLICATION GUIDE

1.800.248.0892 • www.airliftcompany.com

**CAR, TRUCK, SUV & VAN APPLICATIONS**

= No-Drilling Required!

Year	Model	Front Kit	Replacement Bag	Rear Kit	Replacement Bag
BUICK- Cars					
1982-96	Century (Incl. SW) FWD			60797	60297
1967-72	Deluxe, Special, Skylark, Gran Sport (Ex. SW)			60744	60244
1964-66	Deluxe, Custom, Skylark, Sport Wagon			60750	60250
1985-96	Electra & Park Avenue (Ex. SW) FWD			60798	60298
1965-84	Electra, Centurion, Wildcat, LeSabre (Ex. Estate Wagon)			60755	60255
1977-90	Estate Wagon			60755	60255
2000-05	LeSabre (Ex. SW) FWD			60776	60276
1986-99	LeSabre (Ex. SW) FWD			60798	60298
1985	LeSabre RWD			60755	60255
1997-2005	Park Avenue			60776	60276
1973-87	Regal, Century, Gran Sport, Luxus (Incl. SW) RWD			60733	60233
1995-99	Riviera			60776	60276
1979-85	Riviera			60783	60283
1991-96	Roadmaster Estate Wagon & Sedan			60755	60255
1985-96	Skylark			60789	60289
CADILLAC- Cars					
1965-93	All Rear Wheel Drive Models			60755	60255
1985-93	Coupe Deville, Sedan Deville, Touring Sedan (FWD), Fleetwood			60798	60298
CADILLAC- SUVs					
2002-06	Escalade, Escalade XL 2WD & 4WD			60769	60269
2000	Escalade 4-Door Only 2WD & 4WD			59518	50259
CHEVROLET- Cars					
1988-96	Beretta, Corsica			60789	60289
1982-02	Camaro, Z28			60797	60297
1982-94	Cavalier (Incl. SW)			60789	60289
1971-96	Caprice, Impala (Ex. 95-96 SS Models)			60755	60255
1977-96	Caprice, Impala Station Wagons			60755	60255
1965-70	Caprice, Impala, Bel Air, Biscayne (Incl. SW)			60736	60236
1982-90	Celebrity (Incl. SW)			60797	60297
1973-83	Chevelle, Malibu, Laguna (Incl. SW)			60733	60233
1967-72	Chevelle, Malibu, SS, '300' Deluxe, Monte Carlo (Ex. SW)			60744	60244
1964-66	Chevelle, El Camino			60750	60250
1967-87	El Camino			60733	60233
1995-96	Impala Sedan, SS			60786	60286
2004-06	Malibu, Malibu Max			60776	60276
1973-88	Monte Carlo (Ex. SS)			60733	60233
1984-88	Monte Carlo SS			60744	60244
CHEVROLET- Trucks & SUVs					
2002-06	Avalanche 1500 2WD & 4WD			60769	60269
2002-05	Avalanche 2500 4WD			59526	50256
1973-91	Blazer 2WD	81560	81260	59501	50203
1992-97	Blazer, Tahoe 2 Door Only 4WD			59518	50259
1969-91	Blazer 4WD	59612	50272	59501	50203
1973-87	C-10 1/2 Ton Pickup 2WD	81560	81260	59527	50203
	OPTION: For heavy loads or commercial use			57215	50201
1988-98	C-1500 1/2 Ton Pickup Regular & Crew Cab (Not Extended Cab) 2WD			59501	50203
	OPTION: For heavy loads or commercial use			57216	50201

**CAR, TRUCK, SUV & VAN APPLICATIONS**

= No-Drilling Required!

Year	Model	Front Kit	Replacement Bag	Rear Kit	Replacement Bag
CHEVROLET- Trucks & SUVs (CONTINUED)					
1988-98	C-1500 1/2 Ton Pickup Extended Cab 2WD			59501	50203
	OPTION: For heavy loads or commercial use			57128	50252
1973-87	C-20, C-30 3/4 & 1 Ton Pickup 2WD	81560	81260	57215	50201
1988-2000	C-2500 3/4 Ton Pickup 2WD			57216	50201
1988-2000	C-3500 1 Ton (Under 11,000 GVWR) (Ex. 4" Rear Axle Housing) 2WD			57216	50201
2004-06	Colorado Z71 2WD			59539	50203
2004-06	Colorado Z71 & Z85 4WD			59539	50203
2004-06	Colorado Z85 & ZQ8 2WD			59546	50254
2005-06	Equinox 2WD & AWD			60727	60227
1989-2004	Geo-Tracker 2 Door 4WD			60793	60293
1973-87	K-10 1/2 Ton Pickup 4WD	59612	50272	59501	50203
	OPTION: For heavy loads or commercial use			57237	50201
1988-98	K-1500 1/2 Ton Pickup 4WD	See Page #11		59501	50203
	OPTION: For heavy loads or commercial use			57216	50201
1988-2000	K-2500 3/4 Ton Pickup 4WD	See Page #11		57216	50201
1973-87	K-20, K-30 3/4 & 1 Ton Pickup 4WD	59612	50272	57237	50201
1988-2000	K-3500 1 Ton (Under 11,000 GVWR) (Except 4" rear axle housing) 4WD	See Page #11		57216	50201
2001-03	S-10 Blazer 2-Door Only 2WD			59540	50262
1982-2000	S-10 Blazer 2-Door Only 2WD			59535	50256
1982-2005	S-10 Blazer 2-Door Only 4WD			59535	50256
1995-2004	S-10 Blazer 4-Door Only 2WD & 4WD			59536	50254
1982-2003	S-10 Pickup (Without Sport Suspension) 2WD			59529	50202
2000-03	S-10 Pickup Xtreme/or with S-10 Sport Suspension 2WD			59535	50256
1994-2004	S-10 Pickup (All models without track bars) 4WD			59531	50259
1983-93	S-10 Pickup 4WD			59529	50202
1999-2006	Silverado 1500 1/2 Ton Pickup (Except 1500 HD) 2WD & 4WD			59501	50203
2001-05	Silverado 1500 HD 2WD & 4WD			59501	50203
	OPTION: For heavy loads or commercial use			57250	50201
1999-2004	Silverado 2500 3/4 Ton Pickup (Except 2500 HD) 2WD & 4WD			57250	50201
2001-06	Silverado 2500 HD & 3500 1 Ton Pickup 2WD & 4WD (Except comm. cab & chassis)			57275	50201
2000-06	Suburban 1500 1/2 Ton (With coil springs) 2WD & 4WD			60769	60269
1992-99	Suburban 1500 1/2 Ton 2WD & 4WD			59518	50259
1992-99	Suburban 2500 3/4 Ton 2WD			57129	50252
2000-05	Suburban 2500 3/4 Ton (With leaf springs) 4WD			59526	50256
1992-99	Suburban 2500 3/4 Ton 4WD			57217	50201
1973-91	Suburban (May require exhaust modification) 2WD	81560	81260	57221	50201
1973-91	Suburban (May require exhaust modification) 4WD	59612	50272	57221	50201
2000-06	Tahoe 4 Door Only (With coil springs) 2WD & 4WD			60769	60269
1995-2000	Tahoe 4 Door Only (With leaf springs rear) 2WD & 4WD			59518	50259
2002-06	Trailblazer (Except factory air spring option) 4WD			60779	60279

- 1- Requires 6" between tire and frame.
- 2- Requires 8" between tire and frame.
- 3- With axle to frame dimension of 7.25" or less use kit #57128.
- 4- No fit with rear air/heat lines behind axle.
- 5- Short box, extended cab, with fifth wheel hitch, use kit #59542 instead.
- 6- Requires 9" between tire and frame.
- 7- Fits B&W hitch part #1199R in 49" position only with minor modifications to both B&W and Air Lift's upper brackets.

INSTALL TIME- 1 hour or less 2 hours or less 3 hours or less

Which On Board Air System is Right for Your Vehicle?

DESIRED OPERATION	AIR LIFT ON BOARD AIR SYSTEM
Front-to-rear <u>and</u> side-to-side Full Electronic Digital Control	SureSet #25004
Front-to-rear Manual Control	Load Controller II Single #25592
Front-to-rear <u>and</u> side-to-side Manual Control	Load Controller II Dual #25812
Front-to-rear Full Automatic Self-Leveling	SmartAir Single #25415*
Front-to-rear <u>and</u> side-to-side Full Automatic Self-Leveling	SmartAir Dual #25430*

* Not for use with Air Lift 1000 (60000-80000 SERIES)

OCTOBER 2005 3
1-800-248-0892

If you have a front and rear air spring kit call Customer Support for recommended on board air system. 1-800-248-0892

**CAR, TRUCK, SUV & VAN APPLICATIONS**

= No-Drilling Required!

Year	Model	Front Kit	Replacement Bag	Rear Kit	Replacement Bag
CHEVROLET- Vans					
1995-2004	Astro Van (All models with steel multi-leaf suspension)			59521	50269
1985-95	Astro Van (All models with mono-leaf suspensions) (May require exhaust modification)			59504	50272
1996-2002	Express G-1500 1/2 Ton Van			59526	50256
1996-2002	Express G2500 Light Duty (7,300 GVWR and under) Van			59526	50256
1996-2006	Express G-2500 Heavy Duty (Over 7,300 GVWR) & G-3500 Passenger Van Only			57205	50252
1970-95	G-10 1/2 Ton Van (59526 may not fit with rear air or heat)	81560	81260	59526	50256
1970-95	G-20, G-30 3/4 & 1 Ton Van	81560	81260	57105	50284
1998-2004	G-3500 Commercial Chassis (#57239 obsolete replaced by #57245)			57245	50252
1990-96	Lumina APV Van			60751	60251
1997-2005	Venture			60748	60248
CHRYSLER- Cars					
1990-94	Imperial, New Yorker, 5th Avenue, Landua & Salon			60776	60276
1982-95	LeBaron, LeBaron G.T.S. (Incl. SW), TC by Maserati			60776	60276
1984-89	New Yorker, Town & Country			60776	60276
2001-05	PT Cruiser			60788	60288
CHRYSLER- Vans					
2001-03	Town & Country (Except all wheel drive)(#59543 obsolete replaced by #59560)			59560	50254
1984-2000	Town & Country (Except all wheel drive)			59520	50254
2005-06	Town & Country (Except all wheel drive)			59547	50254
DODGE- Cars					
1982-94	400, 600 Daytona, Lancer			60776	60276
1987-94	Shadow			60776	60276
1990-94	Spirit & Dynasty			60776	60276
DODGE- Trucks & SUVs					
1969-93	D-150 1/2 Ton Pickup, W-100, 150 1/2 Ton Pickup 2WD & 4WD			59501	50203
	OPTION: For heavy loads or commercial use			57215	50201
1969-93	D-250 & W-250 3/4 Ton Pickup 2WD & 4WD			57215	50201
1969-93	D-350 & W-350 1 Ton Pickup 2WD & 4WD			57215	50201
2005-06	Dakota 2WD & 4WD			59555	50203
2003-04	Dakota 2WD			59528	50202
1987-2002	Dakota 2WD			59508	50203
1987-2004	Dakota 4WD			59501	50203
2000-01	Dakota RT 2WD			59501	50203
2001-02	Durango- (#59538 obsolete replaced by #59503) 2WD			59503	50208
2003-04	Durango 4WD (with leaf springs)			59532	50254
1998-2002	Durango 4WD			59529	50202
2004-06	Durango 4WD (with coil springs)			60808	60308
2004-06	SRT-10 2WD			59201	50261
2002-06	Ram 1500 1/2 Ton Pickup 2WD & 4WD			59551	50203
1994-2001	Ram 1500 1/2 Ton Pickup 2WD	80765	80265	59501	50203
	OPTION: For heavy loads or commercial use			57215	50201
1994-2002	Ram 2500 3/4 Ton Pickup 2WD & 4WD (FRONT KIT 2WD ONLY)	80765	80265	57215	50201
2003-06	Ram 2500 (#57280 replaced by #57206) 2WD			57206	50252
2003-06	Ram 2500 4WD			57280	50201
1994-2002	Ram 3500 1 Ton Pickup (Except comm cab & chassis) 2WD & 4WD (FRONT KIT 2WD ONLY)	80765	80265	57215	50201
2003-06	Ram 3500 (Single & Dual Wheel) (#57280 replaced by #57206) 2WD			57206	50252
2003-06	Ram 3500 (Single & Dual Rear Wheel) 4WD			57280	50201
1979-93	Ram 50 2WD			59503	50208
1974-93	Ramcharger 2WD & 4WD			59501	50203
1969-93	W-250 3/4 Ton Pickup			57215	50201
1969-93	W-350 1 Ton Pickup			57215	50201

**CAR, TRUCK, SUV & VAN APPLICATIONS**

= No-Drilling Required!

Year	Model	Front Kit	Replacement Bag	Rear Kit	Replacement Bag
DODGE- Vans					
1971-04	B-100, 150, 1500 1/2 Ton Van			57105	50284
1971-04	B-200, 250, 300, 2500, 3500 1/2, 3/4 & 1 Ton Van			57105	50284
2001-03	Caravan (Except all wheel drive)(#59543 obsolete replaced by #59560)			59560	50254
1984-2000	Caravan, Grand Caravan (Except all wheel drive)			59520	50254
2005-06	Caravan, Grand Caravan (Except all wheel drive)			59547	50254
2003-05	Freightliner Sprinter 2500 SRW (Single Rear Wheel)-NEW!			57147	50252
FORD- Cars					
1998-04	Crown Victoria			60798	60298
1983-97	Crown Victoria, Country Squire			60769	60269
2000-05	Focus Sedan (not Station Wagon)			60723	60223
2000-05	Focus Station Wagon			60724	60224
1979-04	Mustang			60797	60297
1986-2005	Taurus Station Wagon			60776	60276
1992-97	Thunderbird			60776	60276
1989-91	Thunderbird			60789	60289
FORD - Trucks & SUVs					
1983-90	Bronco II 4WD	80777	80277	59501	50203
1980-96	Bronco 4WD	80590	80290	59501	50203
2001-06	Escape 2WD & 4WD			60796	60296
2000-04	Excursion 2WD	80590	80290	57132	50252
2000-05	Excursion 4WD	57154	50252	57340	50251
1997-02	Expedition 4WD			61792	61292
1995-97	Explorer (Without automatic ride control option) 2WD			59514	50260
1995-2001	Explorer (Without automatic ride control option) 4WD			59514	50260
1991-94	Explorer 4WD	80777	80277	59506	50254
2001-05	Explorer Sport Trac 4WD			59534	50262
1998-2001	Explorer Sport 4WD			59514	50260
1968-96	F-100, 150 1/2 Ton Pickup 2WD	80590	80290	59501	50203
	OPTION: For heavy loads or commercial use			57215	50201
1980-96	F-100, 150 1/2 Ton Pickup 4WD	80590	80290	59501	50203
	OPTION: For heavy loads or commercial use			57215	50201
1966-79	F-100, 150 1/2 Ton Pickup 4WD	80523	80223	59501	50203
	OPTION: For heavy loads or commercial use			57215	50201
2004-06	F-150 1/2 Ton Pickup (New Body) 2WD & 4WD			59544	50270
1997-04	Heritage F-150 1/2 Ton Pickup (Including Lightning & Harley Davidson) 2WD & 4WD			59501	50203
1997-04	Heritage F-150 with 5th wheel hitch 2WD & 4WD			59542	50203
1980-96	F-250 3/4 Ton Pickup 2WD	80590	80290	57215	50201
1980-97	F-250 3/4 Ton Pickup ('97 Heavy Duty Over 8,600 GVWR Only) 4WD	59611	50203	57215	50201
1997-98	F-250 Light Duty (Under 7,500 GVWR) 3/4 Ton Pickup 2WD & 4WD			57215	50201
1969-79	F-250 (Under 7,500 GVWR) 3/4 Ton Pickup 2WD	80590	80290	57215	50201
1997	F-250 Heavy Duty (7,500 GVWR & Over) 3/4 Ton Pickup 2WD	80590	80290	57215	50201

- 1- Requires 6" between tire and frame.
- 2- Requires 8" between tire and frame.
- 3- With axle to frame dimension of 7.25" or less use kit #57128.
- 4- No fit with rear air/heat lines behind axle.
- 5- Short box, extended cab, with fifth wheel hitch, use kit #59542 instead.
- 6- Requires 9" between tire and frame.
- 7- Fits B&W hitch part #1199R in 49" position only with minor modifications to both B&W and Air Lift's upper brackets.

INSTALL TIME- 1 hour or less 2 hours or less 3 hours or less

Which On Board Air System is Right for Your Vehicle?

DESIRED OPERATION	AIR LIFT ON BOARD AIR SYSTEM
Front-to-rear <u>and</u> side-to-side Full Electronic Digital Control	SureSet #25004
Front-to-rear Manual Control	Load Controller II Single #25592
Front-to-rear <u>and</u> side-to-side Manual Control	Load Controller II Dual #25812
Front-to-rear Full Automatic Self-Leveling	SmartAir Single #25415*
Front-to-rear <u>and</u> side-to-side Full Automatic Self-Leveling	SmartAir Dual #25430*

* Not for use with Air Lift 1000 (60000-80000 SERIES)

OCTOBER 2005 5
1-800-248-0892

If you have a front and rear air spring kit call Customer Support for recommended on board air system. 1-800-248-0892

**CAR, TRUCK, SUV & VAN APPLICATIONS**

= No-Drilling Required!

Year	Model	Front Kit	Replacement Bag	Rear Kit	Replacement Bag
FORD - Trucks & SUVs (CONTINUED)					
1970-79	F-250 (7,500 GVWR and Over) 3/4 Ton Pickup 2WD	80531 <i>III</i>	80231	57215 <i>II</i> ₂	50201
1999-2004	F-250 Super Duty (8,800 GVWR) 3/4 Ton Pickup 2WD	80590 <i>III</i>	80290	57215 <i>II</i> ₂	50201
2005-06	F-250 & F-350 2WD & 4WD (FRONT KIT 4WD ONLY)	80537 <i>I</i>	80237	57346 <i>III</i>	50201
1999-2006	F-250, 350 with B&W hitch 2WD & 4WD (FRONT KIT 4WD ONLY)	80537 <i>I</i>	80237	57346 <i>III</i>	50201
1999-2004	F-250, 350 Super Duty 3/4 & 1 Ton Pickup 2WD & 4WD (FRONT KIT 4WD ONLY)	57154 <i>II</i>	50252	57215 <i>II</i> ₂	50201
1971-2004	F-250, 350, Super Duty with Reese 5th wheel hitch 2WD & 4WD			57342 <i>II</i> ₂	50201
1980-97	F-350 1 Ton (Ex. Super HD chassis) <small>(59611 will not fit with stabilizer bar)</small> 4WD	59611 <i>III</i>	50203	57215 <i>II</i> ₂	50201
1999-2004	F-350 Super Duty 1 Ton Pickup (11,200 GVWR & Under) 2WD	80590 <i>III</i>	80290	57215 <i>II</i> ₂	50201
1980-97	F-350 1 Ton Pickup 2WD	80590 <i>III</i>	80290	57215 <i>II</i> ₂	50201
1970-79	F-350 1 Ton Pickup 2WD	80531 <i>III</i>	80231	57215 <i>II</i> ₂	50201
1999-2004	F-450, F-550 2WD & 4WD	57154 <i>II</i>	50252	57345 <i>II</i> ₆	50229
2005-06	F-450, F-550 4WD			57345 <i>II</i> ₆	50229
1998-2006	Ranger 2WD & 4WD			59516 <i>II</i>	50259
1983-97	Ranger 2WD & 4WD (4WD only 1983-94)	80777 <i>III</i>	80277	59516 <i>II</i>	50259
1995-97	Ranger 4WD	80754 <i>III</i>	80254	59516 <i>II</i>	50259
1983-94	Ranger 4WD	80777 <i>III</i>	80277	59516 <i>II</i>	50259
FORD- Vans					
1986-97	Aerostar			60738 <i>I</i>	60238
1996-2006	E-150 1/2 Ton Van	80545 <i>I</i>	80245	59526 <i>II</i> ₁	50256
1975-2005	E-250, E-350 3/4 & 1 Ton Van	80545 <i>I</i>	80245	57125 <i>II</i>	50284
2004-06	Freestar			60702 <i>I</i>	60202
1994-2003	Windstar			60799 <i>I</i>	60299
GMC- Trucks & SUVs					
1988-98	C & K -1500 & K-1500 1/2 Ton Pickup Regular Cab 2WD & 4WD	See Pg.11 4WD ONLY		59501 <i>II</i> ₁	50203
	OPTION: For heavy loads or commercial use			57216 <i>II</i> ₃	50201
1988-98	C-1500 1/2 Ton Pickup Extended Cab 2WD			59501 <i>II</i> ₁	50203
	OPTION: For heavy loads or commercial use			57128 <i>II</i>	50252
1973-87	C-1500 1/2 Ton Pickup 2WD	81560 <i>I</i>	81260	59527 <i>II</i>	50203
	OPTION: For heavy loads or commercial use			57215 <i>II</i> ₂	50201
1973-87	K-1500 1/2 Ton Pickup 4WD	59612 <i>III</i>		59501 <i>II</i> ₁	50203
	OPTION: For heavy loads or commercial use			57237 <i>II</i> ₂	50201
1988-2000	C & K-2500 3/4 Ton Pickup 2WD & 4WD	See Pg.11 4WD ONLY		57216 <i>II</i> ₃	50201
1973-87	C-2500 3/4 Ton Pickup 2WD	81560 <i>I</i>	81260	57215 <i>II</i> ₂	50201
1973-87	K-2500 3/4 Ton Pickup 4WD	59612 <i>III</i>	50272	57237 <i>II</i> ₂	50201
1988-2000	C-3500 1 Ton Pickup (Under 11,000 GVWR) (Except 4" rear axle housing) 2WD & 4WD			57216 <i>II</i> ₃	50201
1968-87	C-3500 1 Ton Pickup 2WD	81560 <i>I</i>	81260	57215 <i>II</i> ₂	50201
1973-87	K-3500 1 Ton Pickup 4WD	59612 <i>III</i>	50272	57237 <i>II</i> ₂	50201
2004-06	Canyon Z71 2WD AND Z71 & Z85 4WD			59539 <i>I</i>	50203
2004-06	Canyon Z85 2WD			59546 <i>I</i>	50254
2002-06	Envoy (Except factory air spring option) 4WD			60779 <i>I</i>	60279
1973-91	Jimmy 2WD	81560 <i>I</i>	25592 <i>I</i>	59501 <i>II</i> ₁	50203
1969-91	Jimmy 4WD	59612 <i>III</i>	50272	59501 <i>II</i> ₁	50203
2001-02	S-15 Jimmy 2 Door Only 2WD			59540 <i>II</i>	50262
1982-2000	S-15 Jimmy 2 Door Only 2WD			59535 <i>II</i>	50256
1983-2002	S-15 Jimmy 2 Door Only 4WD			59535 <i>II</i>	50256
1995-2002	S-15 Jimmy 4 Door Only 2WD & 4WD			59536 <i>III</i>	50254
1982-2003	S-15 Pickup, Sonoma 2WD			59529 <i>II</i>	50202
1983-93	S-15 Pickup, Sonoma (All models) 4WD			59529 <i>II</i>	50202
1994-2004	S-15 Pickup, Sonoma (All models without track bar) 4WD			59531 <i>II</i>	50259



CAR, TRUCK, SUV & VAN APPLICATIONS

= No-Drilling Required!

Year	Model	Front Kit	Replacement Bag	Rear Kit	Replacement Bag
GMC- Trucks & SUVs (CONTINUED)					
1999-2006	Sierra 1500 1/2 Ton Pickup (Except 1500HD) 2WD & 4WD	See Pg.11 4WD ONLY		59501 <i>1</i>	50203
2001-05	Sierra 1500 HD 2WD & 4WD			59501 <i>1</i>	50203
	OPTION: For heavy loads or commercial use			57250 <i>1</i>	50201
1999-2004	Sierra 2500 3/4 Ton Pickup (Except 2500 HD) 2WD & 4WD	See Pg.11 4WD ONLY		57250 <i>1</i>	50201
2001-06	Sierra 2500HD & 3500 1 Ton Pickup 2WD & 4WD (Except comm. cab & chassis)			57275 <i>1</i>	50201
1992-99	Suburban 1500 1/2 Ton 2WD & 4WD			59518 <i>1</i>	50259
1992-99	Suburban 2500 3/4 Ton 2WD			57129 <i>1</i>	50252
1992-99	Suburban 2500 3/4 Ton 4WD			57217 <i>1</i>	50201
1973-91	Suburban (May require exhaust modification) 2WD	81560 <i>1</i>	81260	57221 <i>1</i>	50201
1973-91	Suburban (May require exhaust modification) 4WD	59612 <i>1</i>	50272	57221 <i>1</i>	50201
2000-06	Yukon or Yukon XL 1500 (With coil springs) 2WD & 4WD			60769 <i>1</i>	60269
2000-05	Yukon XL 2500 3/4 Ton (With leaf springs) 4WD			59526 <i>1</i>	50256
2000-06	Yukon 4 Door (With leaf springs) 4WD			60769 <i>1</i>	60269
1995-2000	Yukon 4 Door (With leaf springs) 2WD & 4WD			59518 <i>1</i>	50259
1992-97	Yukon 2 Door Only 4WD			59518 <i>1</i>	50259
GMC- Vans					
1970-95	G-15 1/2 Ton Van (59526 may not fit with rear air/heat)	81560 <i>1</i>	81260	59526 <i>1</i>	50256
1970-95	G-25, G-35 3/4 & 1 Ton Van	81560 <i>1</i>	81260	57105 <i>1</i>	50284
1996-2002	Savana G-1500 1/2 Ton Van			59526 <i>1</i>	50256
1996-2002	Savana G-2500 (7,300 GVWR and Under)			59526 <i>1</i>	50256
1996-2006	Savana G-2500 & G-3500 Passenger Van Only			57205 <i>1</i>	50252
1995-2004	Safari Van (With steel multi-leaf suspensions)			59521 <i>1</i>	50269
1985-95	Safari Van (With mono-leaf suspension) (May require exhaust modification)			59504 <i>1</i>	50272
HONDA- Vans					
1999-2005	Odyssey			60740 <i>1</i>	60240
1998-2002	Passport			60797 <i>1</i>	60297
2003-05	Pilot			60740 <i>1</i>	60240
HUMMER					
2003-06	Hummer H2 4WD			60769 <i>1</i>	60269
Hyundai- SUVs					
2001-05	Santa-Fe			60727 <i>1</i>	60227
INFINITI- SUV					
1997-2004	QX4 4WD			60742 <i>1</i>	60242
ISUZU- Trucks & SUVs					
1998-99	Amigo			60797 <i>1</i>	60297
1990-93	Amigo			59503 <i>1</i>	50208
2002-04	Axion			60797 <i>1</i>	60297
1996-2000	Pickup, Hombre 2WD Only			59529 <i>1</i>	50202
1995	Pickup 2WD Only			59502 <i>1</i>	50255
1980-94	Pickup 2WD Only			59529 <i>1</i>	50202
1998-2003	Rodeo			60797 <i>1</i>	60297
1991-94	Rodeo			59503 <i>1</i>	50208
1992-2002	Trooper			60783 <i>1</i>	60283
1985-91	Trooper II			59503 <i>1</i>	50208
1999	Vehicross			60797 <i>1</i>	60297

- 1- Requires 6" between tire and frame.
- 2- Requires 8" between tire and frame.
- 3- With axle to frame dimension of 7.25" or less use kit #57128.
- 4- No fit with rear air/heat lines behind axle.
- 5- Short box, extended cab, with fifth wheel hitch, use kit #59542 instead.
- 6- Requires 9" between tire and frame.
- 7- Fits B&W hitch part #1199R in 49" position only with minor modifications to both B&W and Air Lift's upper brackets.

INSTALL TIME- *1* hour or less *1*2 hours or less *1*3 hours or less

Which On Board Air System is Right for Your Vehicle?	
DESIRED OPERATION	AIR LIFT ON BOARD AIR SYSTEM
Front-to-rear <u>and</u> side-to-side Full Electronic Digital Control	SureSet #25004
Front-to-rear Manual Control	Load Controller II Single #25592
Front-to-rear <u>and</u> side-to-side Manual Control	Load Controller II Dual #25812
Front-to-rear Full Automatic Self-Leveling	SmartAir Single #25415*
Front-to-rear <u>and</u> side-to-side Full Automatic Self-Leveling	SmartAir Dual #25430*

* Not for use with Air Lift 1000 (60000-80000 SERIES)

OCTOBER 2005 7
1-800-248-0892

If you have a front and rear air spring kit call Customer Support for recommended on board air system. 1-800-248-0892

**CAR, TRUCK, SUV & VAN APPLICATIONS**

= No-Drilling Required!

Year	Model	Front Kit	Replacement Bag	Rear Kit	Replacement Bag
JEEP/EAGLE- Cars, Trucks & SUVs					
1972-86	CJ Series & Scrambler			59503 <i>ff</i>	50208
1986-93	Comanche	80702 <i>ff</i>	80202	59503 <i>ff</i>	50208
1984-91	Custom & Grand Wagoneer			59507 <i>ff</i>	50259
1992-93	Eagle Summit SW Only			60776 <i>f</i>	60276
2002-06	Liberty- 2WD & 4WD			60777 <i>f</i>	60277
1999-2004	Grand Cherokee			60754 <i>f</i>	60254
1992-98	Grand Wagoneer, Grand Cherokee (Except "Up Country" models)	80702 <i>ff</i>	80202	60795 <i>f</i>	60295
1992-2002	Wagoneer, Cherokee			59507 <i>ff</i>	50259
1997-2005	Wrangler	80702 <i>ff</i>	80202	60734 <i>f</i>	60234
1984-91	XJ-Wagoneer, XJ-Cherokee, Pioneer	80702 <i>ff</i>	80202	59507 <i>ff</i>	50259
KIA- Cars, Vans & SUVs					
2002-05	Sedona Van			60763 <i>f</i>	60263
2003-05	Sorento			60792 <i>f</i>	60292
1997-2003	Sportage			60752 <i>f</i>	60252
LANDROVER- SUV					
1994-97	Defender (USA Only)			61741 <i>ff</i>	61241
LEXUS- Car					
1996-02	LX 450-470			60728 <i>f</i>	60228
LINCOLN- Cars					
1982-88	Continental (Ex. Air Susp.)			60783 <i>f</i>	60283
1984-87	Mark VII (Ex. Air Susp.)			60783 <i>f</i>	60283
1980-89	Towncar			60769 <i>f</i>	60269
LINCOLN- Trucks					
2005-06	Lincoln Mark LT			59544 <i>f</i>	50259
MAZDA-Trucks & Vans					
2001-05	Tribute 2WD & 4WD			60796 <i>f</i>	60296
1998-2006	2WD & 4WD Pickup (All models)			59516 <i>ff</i>	50259
1994-97	2WD Pickup (All models)	80777 <i>f</i>	80277	59516 <i>ff</i>	50259
1994-97	4WD Pickup (All models)	80754 <i>f</i>	80254	59516 <i>ff</i>	50259
1996-98	MPV Van			60776 <i>f</i>	60276
1989-95	MPV Van			60759 <i>f</i>	60259
1991-94	Navajo 4WD Only	80777 <i>f</i>	80277	59506 <i>ff</i>	50254
1972-93	Pickup (All models)			59503 <i>ff</i>	50208
MERCURY- Cars					
1992-97	Cougar			60776 <i>f</i>	60276
1989-91	Cougar			60789 <i>f</i>	60289
1998-04	Grand Marquis			60798 <i>f</i>	60298
1983-97	Grand Marquis, Colony Park (Incl. SW)			60769 <i>f</i>	60269
1986-05	Sable Station Wagon			60776 <i>f</i>	60276
MERCURY- Vans & SUVs					
1996-01	Mountaineer (Without automatic ride control option) 2WD & 4WD			59514 <i>ff</i>	50260
1993-2002	Villager			59510 <i>ff</i>	50255
2004-05	Monterey			60702 <i>f</i>	60202
MITSUBISHI-Trucks & Vans					
1992-93	Expo			60776 <i>f</i>	60276
1990-2000	Montero			60747 <i>f</i>	60247
1999-2004	Montero Sport 4WD			60747 <i>f</i>	60247
1997-98	Montero Sport 4WD			59503 <i>ff</i>	50208
1983-93	Pickup 2WD			59529 <i>ff</i>	50202

**CAR, TRUCK, SUV & VAN APPLICATIONS**

= No-Drilling Required!

Year	Model	Front Kit	Replacement Bag	Rear Kit	Replacement Bag
NISSAN-Trucks & Vans					
1969-97	Pickup 2WD			59529 <i>II</i>	50202
1969-97	Pickup 4WD			59506 <i>II</i>	50254
1998-2000	Frontier 4WD			59506 <i>II</i>	50254
1998	Frontier 2WD			59503 <i>II</i>	50208
2003-04	Frontier 2WD			60774 <i>I</i>	60274
2003-05	Murano 2WD & 4WD			60774 <i>I</i>	60274
2004-05	Pathfinder Armada 4WD			60807 <i>I</i>	60207
2005	Pathfinder 4WD-NEW!			60810 <i>I</i>	60310
1996-2004	Pathfinder 4WD			60742 <i>I</i>	60242
1987-95	Pathfinder 4WD			60783 <i>I</i>	60283
2004-06	Quest 2WD			60806 <i>I</i>	60206
1993-2002	Quest			59510 <i>II</i>	50255
2004-05	Titan 2WD & 4WD			59554 <i>I</i>	50256
2005	Xterra 4WD-NEW!			59562 <i>I</i>	50259
OLDSMOBILE- Cars					
1995-04	Aurora			60776 <i>I</i>	60276
1992-98	Achieva			60789 <i>I</i>	60289
1985-91	Cutlass Calais (FWD)			60789 <i>I</i>	60289
1982-96	Cutlass Cierra			60797 <i>I</i>	60297
1977-93	Custom Cruiser Station Wagon			60755 <i>I</i>	60255
1984-95	Custom Cruiser Station Wagon (FWD)			60797 <i>I</i>	60297
1973-87	Cutlass, Cutlass Supreme, Calais (Ex. SW)			60733 <i>I</i>	60233
1967-72	Cutlass, F-85, 442 (Ex. SW)			60744 <i>I</i>	60244
1964-66	Cutlass (Incl. SW & Vista Cruiser)			60750 <i>I</i>	60250
1985-99	Delta 88,98, Regency (FWD)			60798 <i>I</i>	60298
1996-99	LS Sedan			60798 <i>I</i>	60298
OLDSMOBILE- SUVs & Vans					
2002-04	Bravada (Except factory air spring option)			60779 <i>I</i>	60279
1996-2001	Bravada- 4 Door Only (No fit for '97)			59536 <i>III</i>	50254
1991-94	Bravada			59503 <i>II</i>	50208
1997-2004	Silhouette APV			60748 <i>I</i>	60248
1990-96	Silhouette			60751 <i>I</i>	60251
PLYMOUTH- Cars					
1989-95	Acclaim			60776 <i>I</i>	60276
1981-94	Reliant			60776 <i>I</i>	60276
1987-93	Sundance			60776 <i>I</i>	60276
PLYMOUTH- Vans					
2001-03	Voyager, Grand Voyager (Except all wheel drive)(#59543 obsolete replaced by #59560)			59560 <i>II</i>	50254
1984-2000	Voyager, Grand Voyager (Except all wheel drive)			59520 <i>II</i>	50254
PONTIAC- Cars					
1982-91	6000			60797 <i>I</i>	60297
2000-05	Bonneville (FWD)			60776 <i>I</i>	60276
1987-99	Bonneville (FWD)			60798 <i>I</i>	60298
1982-02	Firebird, Trans Am			60797 <i>I</i>	60297

- 1- Requires 6" between tire and frame.
- 2- Requires 8" between tire and frame.
- 3- With axle to frame dimension of 7.25" or less use kit #57128.
- 4- No fit with rear air/heat lines behind axle.
- 5- Short box, extended cab, with fifth wheel hitch, use kit #59542 instead.
- 6- Requires 9" between tire and frame.
- 7- Fits B&W hitch part #1199R in 49" position only with minor modifications to both B&W and Air Lift's upper brackets.

INSTALL TIME- *I* 1 hour or less *II* 2 hours or less *III* 3 hours or less

Which On Board Air System is Right for Your Vehicle?

DESIRED OPERATION	AIR LIFT ON BOARD AIR SYSTEM
Front-to-rear and side-to-side Full Electronic Digital Control	SureSet #25004
Front-to-rear Manual Control	Load Controller II Single #25592
Front-to-rear and side-to-side Manual Control	Load Controller II Dual #25812
Front-to-rear Full Automatic Self-Leveling	SmartAir Single #25415*
Front-to-rear and side-to-side Full Automatic Self-Leveling	SmartAir Dual #25430*

* Not for use with Air Lift 1000 (60000-80000 SERIES)

OCTOBER 2005 9
1-800-248-0892

If you have a front and rear air spring kit call Customer Support for recommended on board air system. 1-800-248-0892



CAR, TRUCK, SUV & VAN APPLICATIONS

= No-Drilling Required!

Year	Year Model	Front Kit	Replacement Bag	Rear Kit	Replacement Bag
PONTIAC- Cars (CONTINUED)					
1985-98	Grand Am			60789	60289
1973-82	Grand Am, Grand LeMans, LeMans (Incl. SWD)			60733	60233
1973-87	Grand Prix			60733	60233
1969-72	Grand Prix			60744	60244
1965-68	Grand Prix			60733	60233
1982-94	J-2000, Sunbird (Incl. SW)			60789	60289
1988-92	LeMans			60789	60289
1967-72	LeMans, Tempest, GTO, GT37 (Ex. SW)			60744	60244
1987-89	Safari Station Wagon			60755	60255
1964-66	Tempest, GTO (Incl. SW)			60750	60250
PONTIAC- Vans					
1997-05	Transport APV Van, Montana			60748	60248
1990-96	Transport APV Van			60751	60251
SATURN- SUVs					
2002-06	Vue SUV			60727	60227
SUZUKI- Trucks					
1999-2005	Grand Vitara, Vitara, XL-7 4WD			60793	60293
1989-98	Sidekick 2 Door			60793	60293
TOYOTA- Trucks & SUVs					
1969-95	Pickup 2WD			59502	50255
1969-95	Pickup (Except extended cab) 4WD			59502	50255
1969-95	Extended Cab Pickup 4WD			59517	50254
2003-06	4 Runner 4WD-NEW!			60809	60309
1996-02	4-Runner 2WD & 4WD			60743	60243
1990-95	4 Runner 4WD			60734	60234
1991-02	Land Cruiser			60728	60228
1979-90	Land Cruiser			59102	50272
1996-2000	RAV4 2WD & 4WD			60789	60289
2005	Scion XB			60774	60274
2001-06	Sequoia 2WD & 4WD			60734	60234
1993-98	T-100 Pickup 2WD (All models)			59502	50255
1993-98	T-100 Pickup 4WD			59503	50208
1995-2004	Tacoma 2WD (All models)			59503	50208
2005	Tacoma 4WD (All models)-NEW!			59561	50254
1995-2004	Tacoma 4WD (All models)			59537	50256
2000-06	Tundra 2WD & 4WD			59530	50270
TOYOTA- Vans					
1991-96	Previa (All models)			60739	60239
2004-06	Sienna Van			60732	60232
1998-03	Sienna Van			60785	60285
VOLKSWAGEN- Van					
1985-03	EuroVan			60789	60289

- 1- Requires 6" between tire and frame.
- 2- Requires 8" between tire and frame.
- 3- With axle to frame dimension of 7.25" or less use kit #57128.
- 4- No fit with rear air/heat lines behind axle.
- 5- Short box, extended cab, with fifth wheel hitch, use kit #59542 instead.
- 6- Requires 9" between tire and frame.
- 7- Fits B&W hitch part #1199R in 49" position only with minor modifications to both B&W and Air Lift's upper brackets.

INSTALL TIME- 1 hour or less 2 hours or less 3 hours or less

Which On Board Air System is Right for Your Vehicle?

DESIRED OPERATION	AIR LIFT ON BOARD AIR SYSTEM
Front-to-rear <u>and</u> side-to-side Full Electronic Digital Control	SureSet #25004
Front-to-rear Manual Control	Load Controller II Single #25592
Front-to-rear <u>and</u> side-to-side Manual Control	Load Controller II Dual #25812
Front-to-rear Full Automatic Self-Leveling	SmartAir Single #25415*
Front-to-rear <u>and</u> side-to-side Full Automatic Self-Leveling	SmartAir Dual #25430*

* Not for use with Air Lift 1000 (60000-80000 SERIES)

If you have a front and rear air spring kit call Customer Support for recommended on board air system. 1-800-248-0892

OCTOBER 2005 10
1-800-248-0892

FOR MOTOR HOME REAR APPLICATIONS CALL CUSTOMER SUPPORT AT 1-800-248-0892



MOTOR HOME/RV APPLICATIONS

Year	Model	Front Kit	Replacement Bag	Rear Kit	Replacement Bag
CHEVROLET/WORKHORSE Motor homes & Step Vans					
1970-95	G-30 Class "C" Motor home	81560	81260	57105	50284
1998-2004	G-3500 Class "C" Motor home (#57239 obsolete replaced by #57245)	-	-	57245	50252
1993-95	GP-30 Cutaway Chassis	81560	81260	57203	50284
2002-04	W20/W22 Class "A" Workhorse Motor home(GVWR 20,000-22,000)	57101	50252	57202	50201
2000-03	P-32 Class "A" Workhorse Motor home (18,000 GVWR Only)	81560	81260	57362	50229
1993-2002	P-30, P-32 Class "A" Motor home (Over 14,500 GVWR including Workhorse)	81560	81260	57219	50201
1993-98	P-30, P-32 Class "A" Motor home (Under 14,500 GVWR)	81560	81260	57203	50284
1963-92	P-30, P-32 Class "A" Motor home	81560	81260	57203	50284
DODGE Motor homes					
1971-94	B-350 Class "C" Motor home	-	-	57105	50284
1973-82	M-300, M-400, M-500, M-600 Class "A" Motor home	57106	50252	57214	50211
FORD Motor homes					
1996-2005	E-450 Super Duty Class "C" 14,050 GVWR (Under Frame Kit)	80531	80231	57131	50201
	OPTION:(Side Mount Kit) for Maximum Load & Stability*	-	-	57242	50251
1975-2006	E-350 Class "C" Motor home	80545	80245	57125	50284
1998-2004	F-53 Class "A" Motor home	57140	50252	57410	50229
1990-97	F-53 Class "A" Motor home	57140	50252	57208	50201
OSHKOSH/JOHN DEER/FREIGHTLINER Motor homes					
1987-92	Class "A" Motor home- (Front Engine Models Only)(Rear kit #57209 Obsolete)	57106	50252	-	-
1991-97	Class "A" Pusher "X" Chassis Only	-	-	57224	50201
TOYOTA Motor homes					
1986-94	Micro Mini Motor home	-	-	57113	50252

*Requires 8" between tire and frame. Use #57131 if mounting area is obstructed.

REPLACEMENTS FOR FIRESTONE MOTOR HOME BAGS	Number on Firestone bag	Firestone Part Number	Air Lift Part Number
Air Lift 2B7, 1/4" NPT Air Spring	224C	0335	50329
Air Lift 2B6 Extended, 1/4" NPT Air Spring	255C	6957	50309

SLAM AIR APPLICATIONS FOR LOWERED VEHICLES

Year	Model	2"- 4" Rear Kit	Replacement Bag	5"- 6" Kit	Rear Replacement Bag
1988-98	CHEVROLET/GMC- 1/2 Ton Full Size Truck	59103	50254	59106BT	50203
1988-2000	CHEVROLET/GMC- 3/4 Ton Truck- Classic Only	no fit	no fit	59202	50307
1988-2000	CHEVROLET/GMC- 1 Ton Truck	no fit	no fit	59202	50307
1995-2004	CHEVROLET- Astro Van (multi-leaf)	59111	50254	no fit	no fit
1985-1995	CHEVROLET- Astro Van (mono-leaf)	59109	50254	no fit	no fit
1982-2002	CHEVROLET/GMC- Blazer, Jimmy, Bravada 2WD ONLY	59102	50272	no fit	no fit
1993-2005	CHEVROLET/GMC- Silverado/Sierra 1/2 Ton Pickup (Expect 1500 HD)	59103	50254	no fit	no fit
1982-04	CHEVROLET/GMC- S-10/Sonoma Pickup	59102**	50272	no fit	no fit
2000-04	CHEVROLET- S-10 Pickup Extreme	59102**	50272	no fit	no fit
1970-2003	FORD- 1/2 Ton Full Size Truck	59103	50254	no fit	no fit
1969-2001	DODGE- 1/2 Ton Full Size Truck	59103	50254	no fit	no fit
1969-1998	TOYOTA- Pickup 2WD	59102**	50272	no fit	no fit
1995-2004	TOYOTA- Tacoma 2WD	59102**	50272	no fit	no fit

**If top of leaf to bottom of the frame is less than 8.5" - use kit #59104.

AIR CELL APPLICATIONS

1988-2000	Chevy/GMC 4WD 3/4 & 1 Ton (With stamped lower control arm)	52100
1988-98	Chevy/GMC 4WD 1/2 Ton (Old Body)	52100
1992-96	Chevy/GMC Tahoe/Full Size Blazer/Yukon/Suburban	52100
1996-2000	Chevy/GMC 4WD 3/4 & 1 Ton (Old Body) (With cast lower control arm)	52110
1999-2000	Chevy/GMC 4WD 1/2 Ton (With cast lower control arm)	52120

INSTALL TIME- 1 hour or less 2 hours or less 3 hours or less

OCTOBER 2005 11

1-800-248-0892

FOR MOTOR HOME REAR APPLICATIONS CALL CUSTOMER SUPPORT AT 1-800-248-0892

Suspension Kits

Make	Year/ Model	Drive	Wheel Base (inches)	Suspension RPO	Front/ Rear	RoadTamer Kit
Chevy	01-06 2500HD/3500 (3)	4WD	167	N.A.	Rear	39020
	01-06 2500HD/3500 w/o kneeling	2WD	133, 143.5 (other - call)	N.A.	Rear	39020
		4WD	133, 143.5 (other - call)	N.A.	Rear	39020
	01-06 2500HD/3500 w/kneeling	2WD	133, 143.5 (other - call)	N.A.	Rear	39020K
		4WD	133, 143.5 (other - call)	N.A.	Rear	39020K
	03-06 4500 w/3" drop front & rear kneeling is standard (4)	2WD Only	N.A.	GR2, GR3, GXA (4) (other - call)	Rear air w/ Frnt. & Rr 3" drop	39025
	03-06 4500 Kneeling is standard (4)	2WD	N.A.	GR2, GR3, GXA (4) (other - call)	Rear	39023
	02-06 3500 CmrcI - customized	2WD	N.A.	N.A.	Rear	39204
	Driveline Spacer Kit for 2500HD/3500 (3)	All	-	-	Rear	26029
	Axle Shim fit kit for C4500 (4)	2WD	-	-	-	26392
Dodge	03-05 3500 w/o kneeling	2WD	160.5 DRW (other - call)	N.A.	Rear	39033
	03-05 3500 w/kneeling	2WD	160.5 DRW (other - call)	N.A.	Rear	39033K
	03-05 3500 w/o kneeling	4WD	160.5 DRW (other - call)	N.A.	Rear	39034
	03-05 3500 w/kneeling	4WD	160.5 DRW (other - call)	N.A.	Rear	39034K
Ford (1)	99-04 F-350 w/o kneeling (F-250 call) (5)	All	137,142,172 (other - call)	N.A.	Rear	39010
	99-04 F-350 w/kneeling (F-250 call) (5)	All	137,142,172 (other - call)	N.A.	Rear	39010K
	05-06 F-350 w/o kneeling, w/ 3.75" blocks only. (For use with 2" blocks see (5). (F-250 call)	All	137,142,172 (other - call)	N.A.	Rear	39015
	05-06 F-350 w/kneeling, w/ 3.75" blocks only. For use with 2" blocks see (5). (F-250 call).	All	137,142,172 (other - call)	N.A.	Rear	39015K
	99-06 F-450/550 w/kneeling, for vehicles with locating- pin to locating-pin measurement of 41 1/2" see (2)	All	176.2 (other - call)	N.A.	Rear	39012
	99-06 F-450/550 w/kneeling, for vehicles with locating- pin to locating-pin measurement of 41 1/8" see (2)	All	176.2 (other - call)	N.A.	Rear	39014
	99-05 F-450/550	2WD	N.A.	N.A.	Front	39013
	Ford Axle Spacer kit for SRW	All	-	-	Rear	26024
	Ford 2" spacer block (5)	All	-	-	Rear	26057
	All	Expansion Tank	All	All	All	Rear

- (1) All Ford Single Rear Wheel (SRW) vehicles require spacer kit 26024
- (2) In order to determine the locating-pin to locating-pin distance, measure from the center of the leaf spring locating-pin, across the axle, to the center of the opposite leaf spring locating-pin.
- (3) 167" wheelbase requires drive shaft spacer fit kit part number 26029
- (4) Chevy C4500 with suspension RPO GXA requires shim wedges p/n 26392
- (5) OEM axle spacer block which is 2 inches tall requires p/n 26057 Dual Rear Wheel (DRW)

Note: If you don't find your specific vehicle, call for the latest application listings 1-800-248-0892.

Select-a-Ride Digital Damping System

Shocks Only (For trucks over 10,000 GVWR)

Make	Year/ Model	Drive	Front/ Rear	Shocks Only Part Number
Chevy	01-06 3500	2&4WD	Rear	54103
	03-06 4500/3 inch lowered 4500	2WD	Rear	54103
Dodge	03-05 3500	2WD	Rear	54105
	03-05 3500	4WD	Rear	54106
Ford	99-06 F-350	2WD	Rear	54100
	99-06 F-350	4WD	Rear	54101
	99-06 F-450/550	2&4WD	Rear	54102
Freight				

Two Shock System with Digital Controller*

Make	Year/ Model	Drive	Front/ Rear	Two Shock System Part Number
Chevy	01-06 3500	2&4WD	Rear	54203
	03-06 4500/3 inch lowered 4500	2WD	Rear	54203
Dodge	03-05 3500	2WD	Rear	54205
	03-05 3500	4WD	Rear	54206
Ford	99-06 F-350	2WD	Rear	54200
	99-06 F-350	4WD	Rear	54201
	99-06 F-450/550	2&4WD	Rear	54202
All	Select-a-Ride 4 shock Digital Controller only	2&4WD	Rear	25222

* Includes 2 shocks and Select-a-Ride digital controller.